PHILIPS

N4407

MODEL

SERVICE MANUAL

Sk 1	
closed contact at	
recording	playback
1-6	
4-5	2-4-8
7-9-10-14	11-19
11-12	15-16
17-23	18-20
18-22	21-23
19-21	26-28
20-24	
25-26-27	

Sk 101	
closed contact at	
recording	playback
101 - 106	101 - 103
104 - 105	102-104-108
107 - 110 - 114	111 - 119
111 - 112	115 - 116
117 - 123	118 - 120
118 - 122	121 - 125
120 - 124	121 - 123
119 - 121	127 - 128
126 - 128	

Sk 2		
closed contact at		
4,75 cm/s	9,5 cm/s	19 cm/s
205 - 211	203-205-209	201-205-207
208 - 212	204-206-210	202-206-208
213 - 215 - 217	213-217	
214 - 216 - 218	214-218	



Sk 3	
closed contact at	
forward	stop
301 - 303 302 - 306 304 - 305	303-306-307



Sk 4			
closed contact at			
2 - 3	1 - 4	stereo	parallel
401 - 403	401 - 403	403 - 405	401 - 403
402 - 404	402 - 404	404 - 406	402 - 404
410 - 412	411 - 413	407 - 408	
411 - 413	412 - 414	409-410-411	
416 - 418	415 - 417	412 - 414	415 - 417
419 - 421	416 - 418	415 - 417	
420 - 422	421 - 422	421 - 422	419 - 421
425 - 427	423 - 425	423 - 425	
426 - 428	424 - 426	424 - 426	
		427 - 429	
		428 - 430	
		431 - 432	

Sk 6		
closed contact at		
multiplay	normal	duoplay
602 - 604	601 - 608	602 - 604
603 - 607	615 - 616	603 - 607
605 - 606		605 - 606
609 - 613		609 - 613
610 - 612		



contact springs viewed from the print side

Sk	function
0	mains switch
1	rec/play - switch left
101	rec/play - switch right
2	speed selector
3	forward switch
4	track selector
5	voltage adapter
6	multiplay - duoplay
7	loudspeaker switch



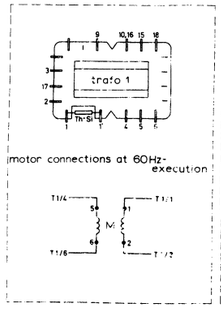

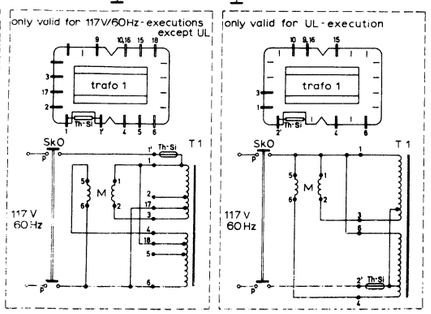



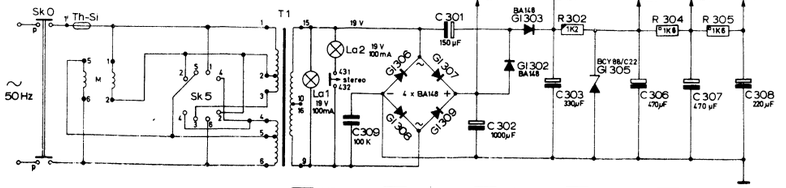

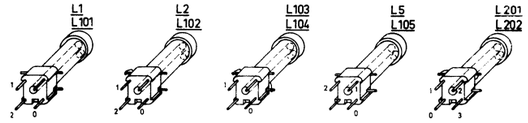

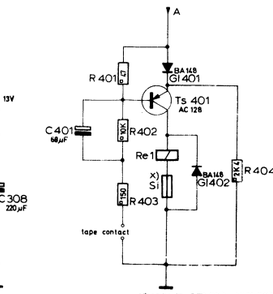

*) only in SEMKO; NEMKO; DEMKO-execution

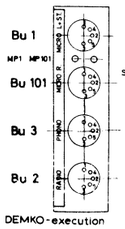

socket brackets viewed from the plug-in side

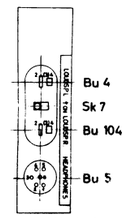

3103 206 01193